

User Manual

(FB4 Version)

(For all the animation lasers operated by FB4)



This user manual contains important information about the safe installation and use of this product. Please read and follow the instruction carefully and keep this manual in a safe place for future reference.



Professional Stage Lighting

Getting Started

Thanks for choosing our product, please read and follow the user manual carefully and keep this manual in a safe place for future use.

1. Security warning

- 1、When the product is outputting a single laser beam, there must be no flammable substances within 10 meters.
- 2、Prohibited to expose the laser light to human skin or eyes, as it poses a risk of damaging human health.
- 3、Do not point your camera too close to the laser aperture, as it may burn out the camera!
- 4、The product is only intended for installation, operation and maintenance by qualified personnel.
- 5、Before installation, ensure that the voltage and frequency of power supply match the power requirement of the product.
- 6、It is essential that each product is correctly earthed and that electrical installation conforms to all relevant standards.
- 7、Make sure that the power-cord is never crimped or damaged by sharp edges. Never let the power-cord come into contact with other cables. Only handle the power-cord by the plug. Never pull out the plug by tugging the power-cord.
- 8、Do not attempt to dismantle and/or modify the product inner structure. Otherwise 2 years of warranty will get invalid.
- 9、There is no user serviceable parts inside the product, do not open the housing and never operate the product with the cover removed.

2. Specification

(This user manual is for all the animation lasers operated by FB4, as different models differ on power, scanner, size etc., so they are marked by blanks)

Product Name	Animation laser	Model No.	
Power		Diode Brand	Nichia (import from Japan)
Light Source	(R): * W/638nm ; (G): * W/525nm ; (B): * W/450nm ;		
Input Voltage	110/240V ; 50/60HZ	Power Consumption	
Power Supply	Mornsun / Mean Well brand	DMX Channel	16/26CH
Scanning Angle	Max 60°	Scanner	
Laser Show	Text/graphic/animation/beam /LOGO/ customization	Special Design	Unique double-layer structure, with the optical path layer completely sealed
Heat Dissipation	High-speed air cooling (with built-in cooling fan system)	IP Grade	IP65 waterproof (Third-party quality inspection report)
Working Temperature	-40°C ~ 45°C-	Diode Lifetime	Over 20000 hours
Net Weight		Product Size	
Gross Weight		Packing Size	
Self Protection	When the laser beam is focused to the minimum point for a long time, it automatically light off.		
Analog Modulation	100k Analog. The power of the red, green and blue can be adjusted from 0 to 100. Adjust the power according to the show to optimize the alignment effect		
Control Mode	ILDA mode: international standard 25 pins (with inbuilt FB4 or external FB4, use it when controlled by computer software) DMX mode :XLR DMX512 (use it when controlled by console. If the laser has inbuilt FB4, a DMX sub-board must be installed) Auto mode: voice control/auto-run/master-slave mode (use it with no controller. Voice control cannot be used if the laser has inbuilt FB4)		
Packing	To prevent damage during transportation, professional flight case (shock-absorbing EPE foam + silent wheels) have been adopted for safety protection!		

3. Connection

Inbuilt FB4 connection

① 1 inbuilt FB4 + 1 laser connection



② 1 inbuilt FB4 + lasers (no FB4) connection




③ Inbuilt FB4s + lasers connection



④DMX512 console + laser software connection (ENTTEC signal conversion)


Attention: 1.Console controls the computer software in real time to replace effect
2.Suitable for large indoor bars or large outdoor concerts.
Tiger or MA console is recommended
3.This connection is for use by QS software. If it is Beyond software
no need to add ENTTEC

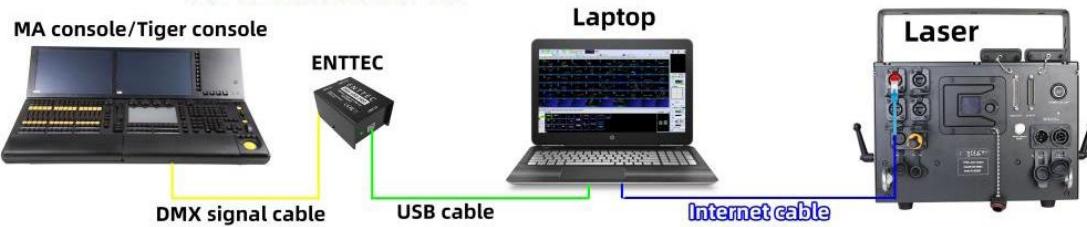

⑤FB4 with DMX sub-board

Offline control


Attention: 1.First, the effects in QS need to be imported into FB4 by computer software
2. Then go offline, and the console can control the effects within FB4,
no need the computer

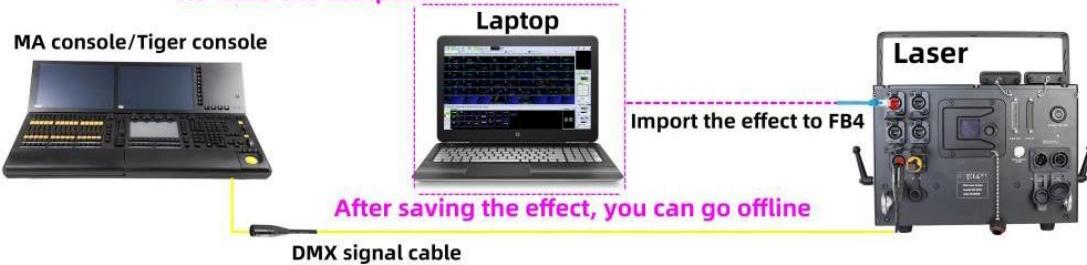


⑥DMX512 console + laser software connection (for Beyond software)

Real time control


Attention: 1.If the software is Pangolin Beyond, the laser can be controlled in real time
2.FB4 does not need a dmx sub-board.

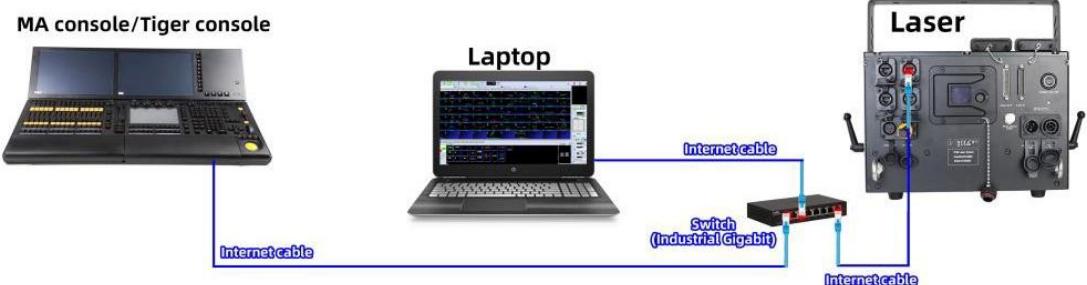

1 inbuilt FB4 + lasers (no FB4) connection (With identical animation)

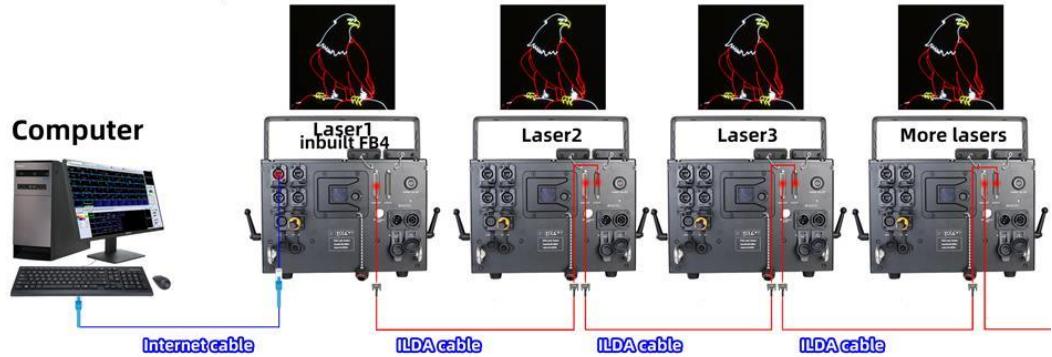

Inbuilt FB4s + lasers connection

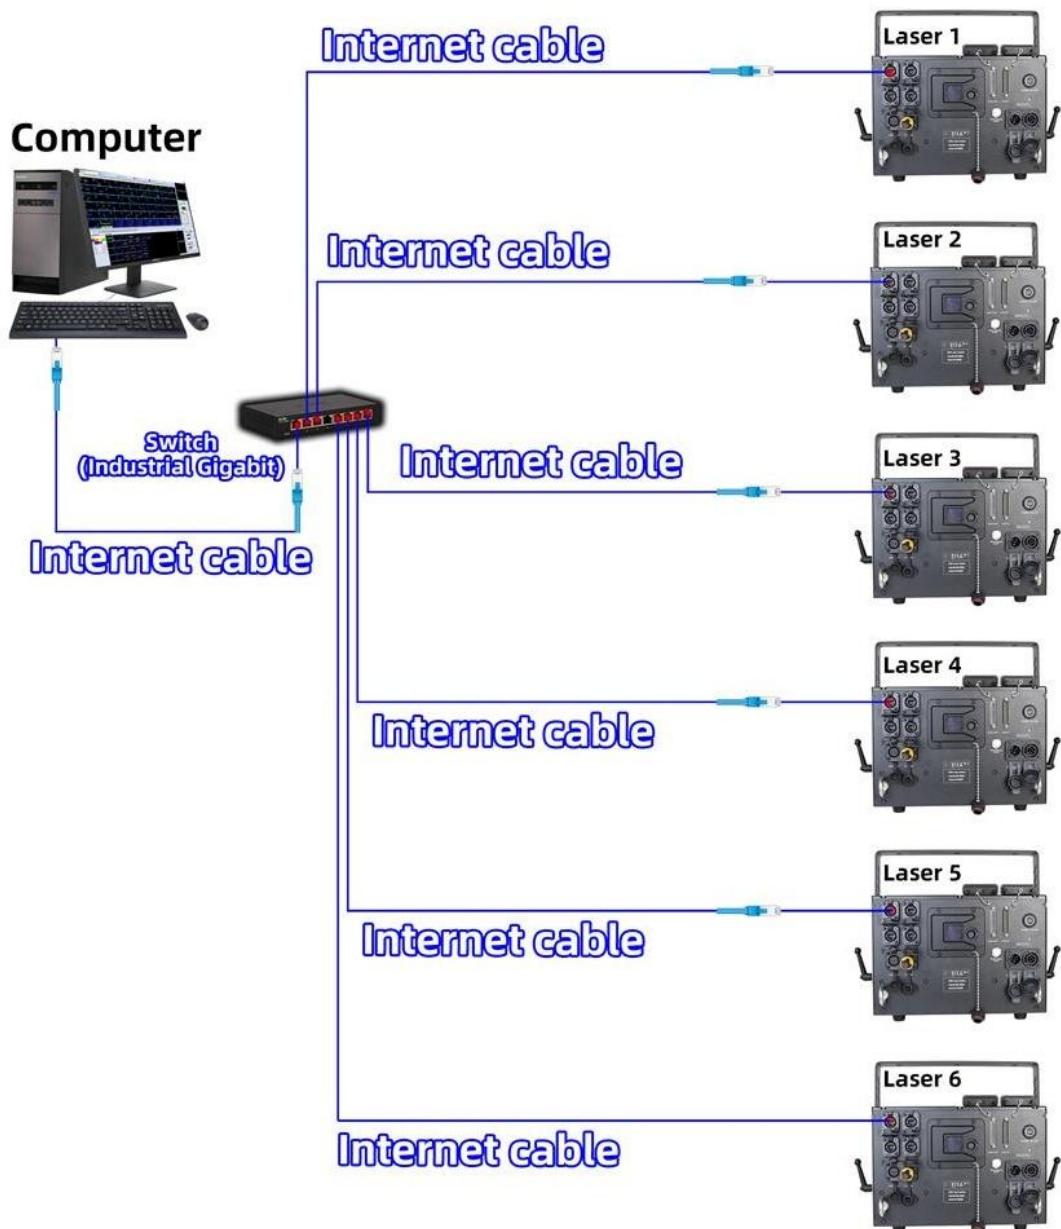

External FB4 connection


① 1 external FB4 + 1 laser connection



②1 external FB4 + lasers connection (With identical animation)



③external FB4s + lasers connection ((control each laser independently))

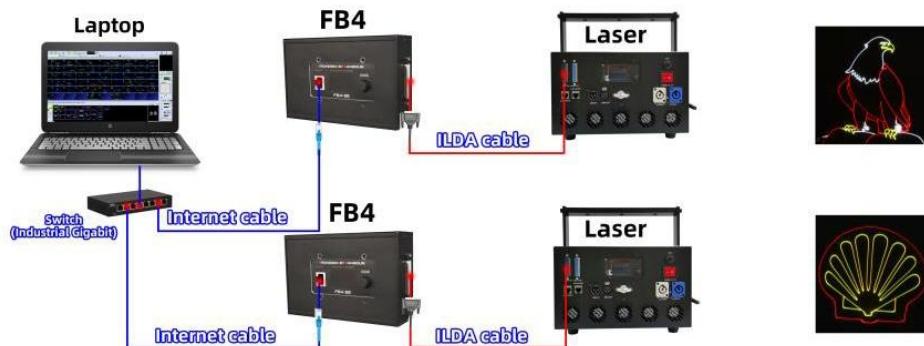

④DMX512 console + laser software connection (ENTTEC signal conversion) Real time control


Attention: 1.Console controls the computer software in real time to replace effect
2.Suitable for large indoor bars or large outdoor concerts. Tiger or MA console is recommended
3.This connection is for use by QS software. If it is Beyond software, no need to add ENTTEC



⑤FB4 WITH DMX SUB-BOARD


Offline control

Attention: 1.First, the effects in QS need to be imported into FB4 by computer software
2. Then go offline, and the console can control the effects within FB4, no need the computer

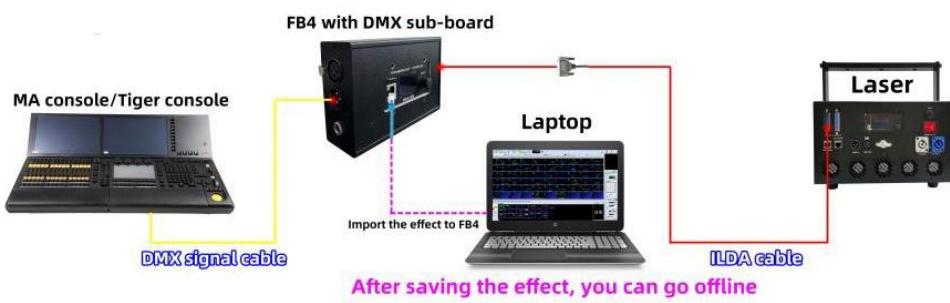


⑥DMX512 console + laser software connection (for Beyond software) Real time control


Attention: 1.If the software is Pangolin Beyond, the laser can be controlled in real time
2.FB4 does not need a dmx sub-board.

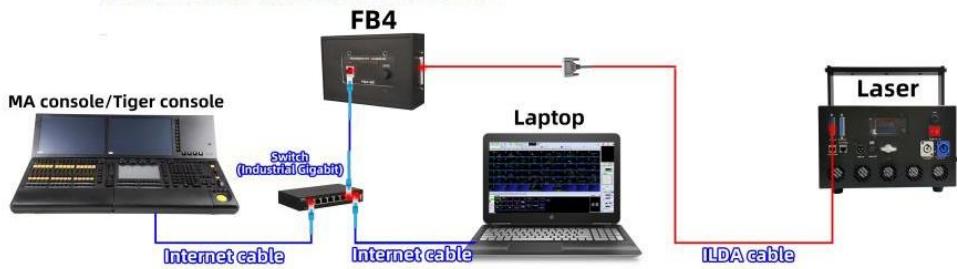

1 external FB4 + lasers connection With identical animation

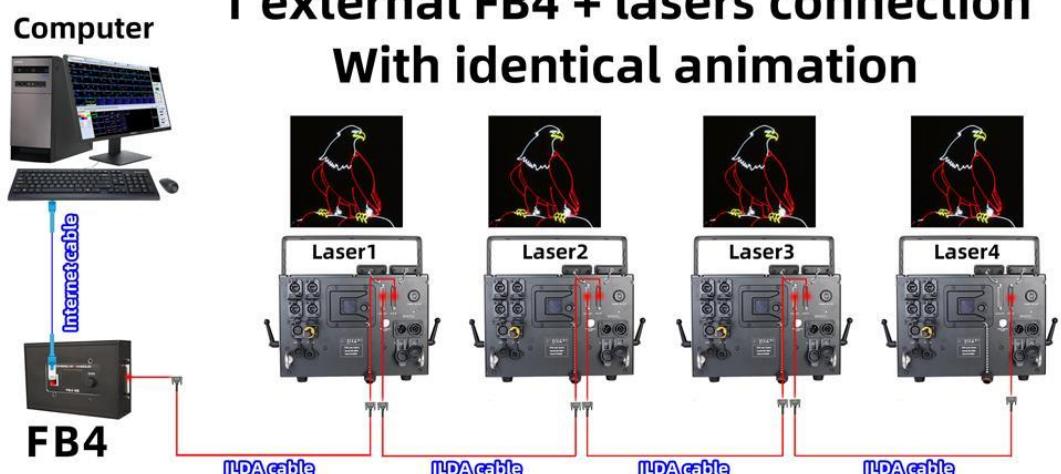


External FB4s + lasers connection (Control each laser independently)

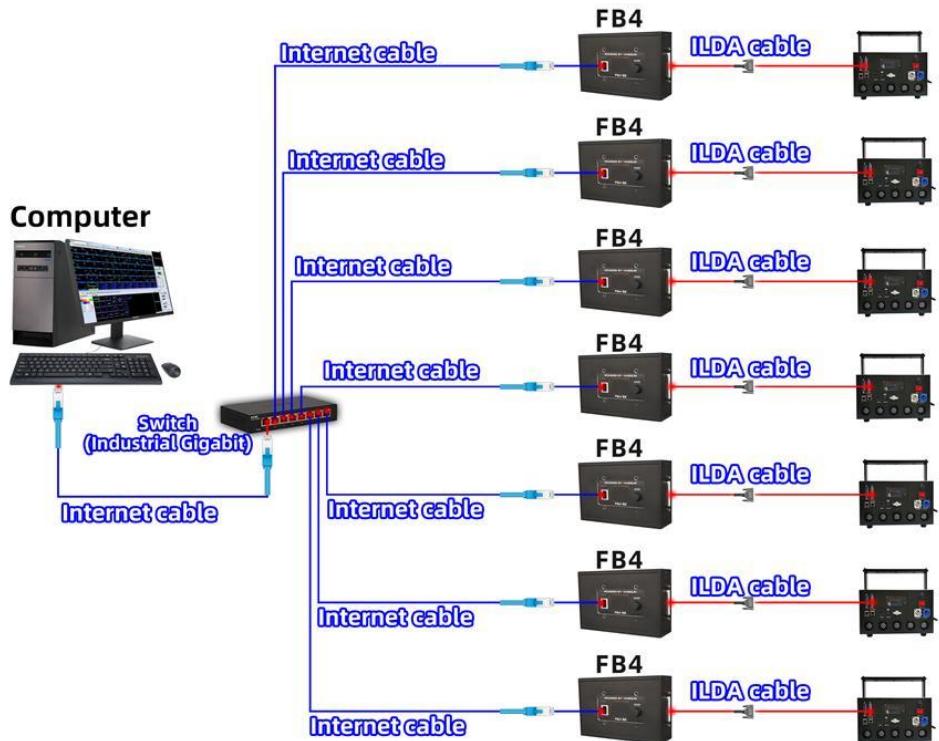


External FB3 connection


① 1 external FB3 + 1 laser connection

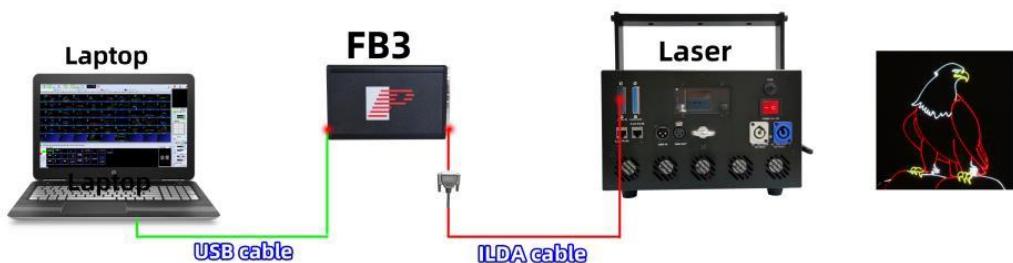

② 1 external FB3 + lasers connection (with identical animation)

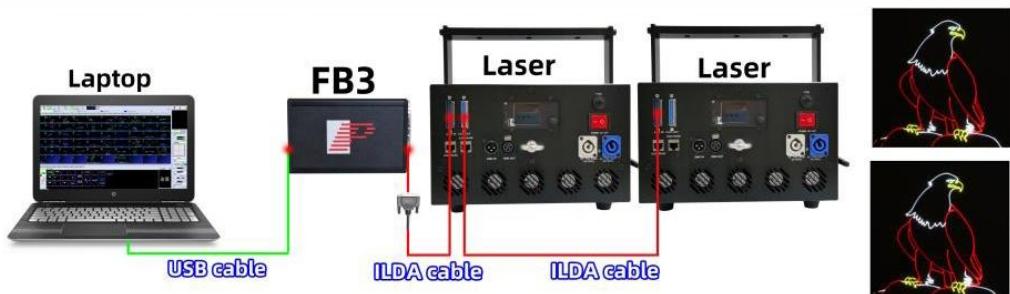

③ external FB3s + lasers connection (control each laser independently)

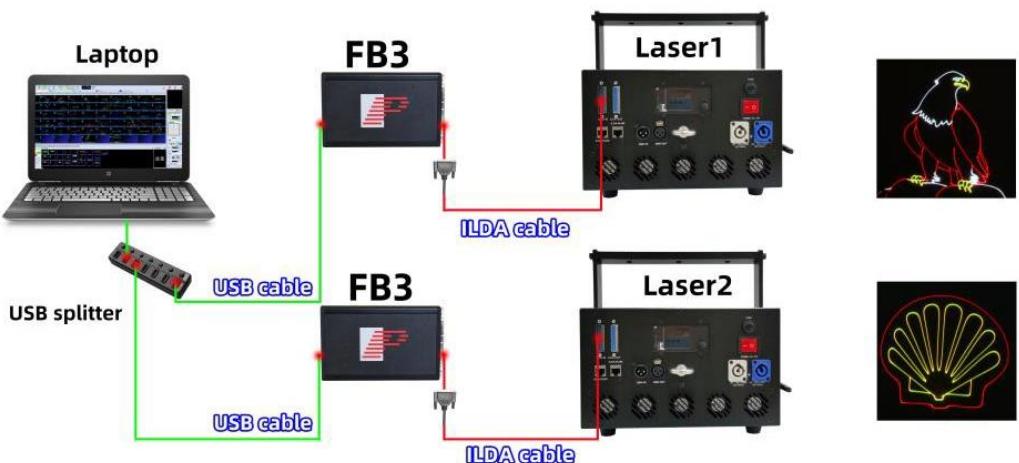

④ DMX512 console + laser software connection (ENTTEC signal conversion)

Attention: 1. Console controls the computer software in real time to replace effect
 2. Suitable for large indoor bars or large outdoor concerts.
 Tiger or MA console is recommended
 3. This connection is for use by QS software. If it is Beyond software
 no need to add ENTTEC




⑤DMX512 console + laser software connection (for Beyond software)


Attention: 1.Console controls the computer software in real time to replace effect
2.Suitable for large indoor bars or large outdoor concerts.
Tiger or MA console is recommended
3.This connection is Beyond software, no need to add ENTTEC




4 lasers connection

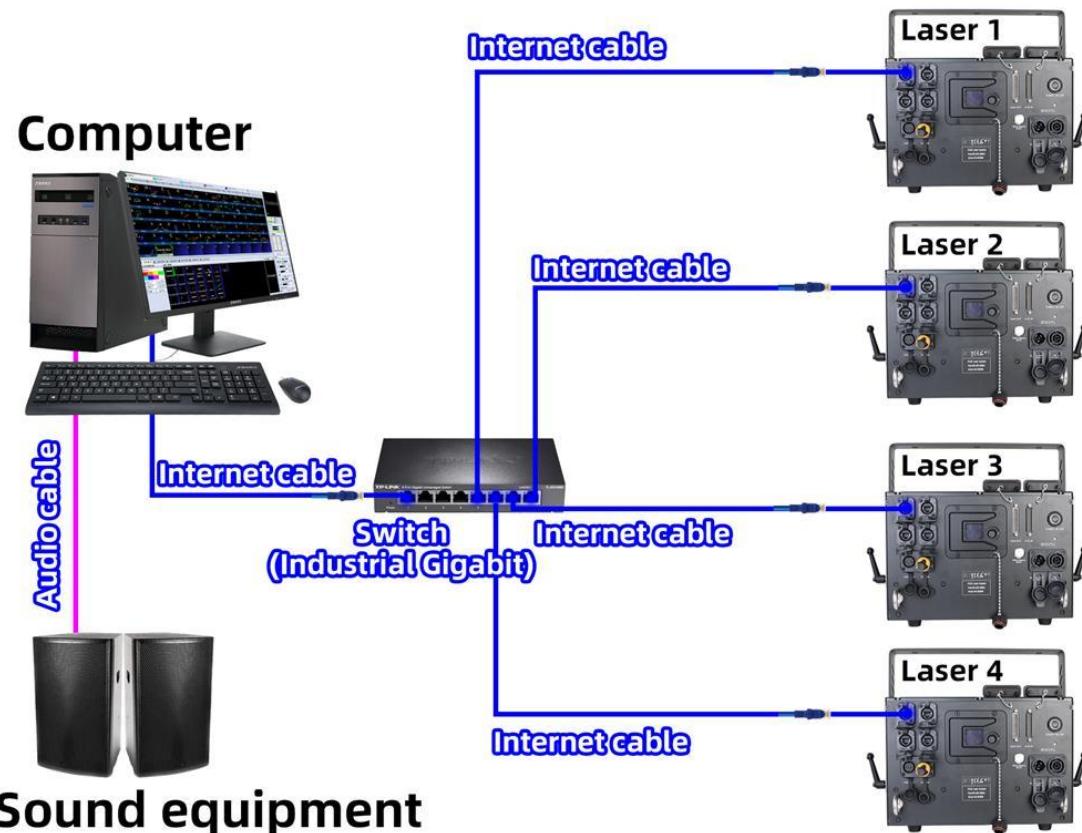

6 lasers connection

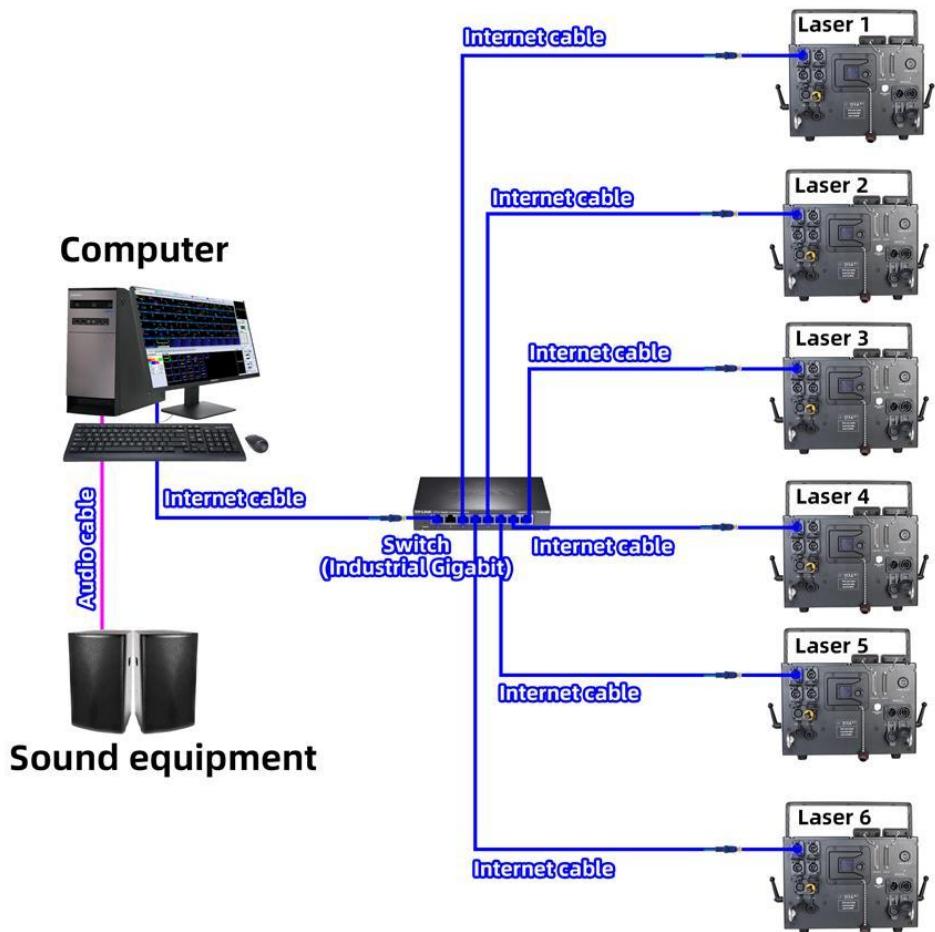

8 lasers connection

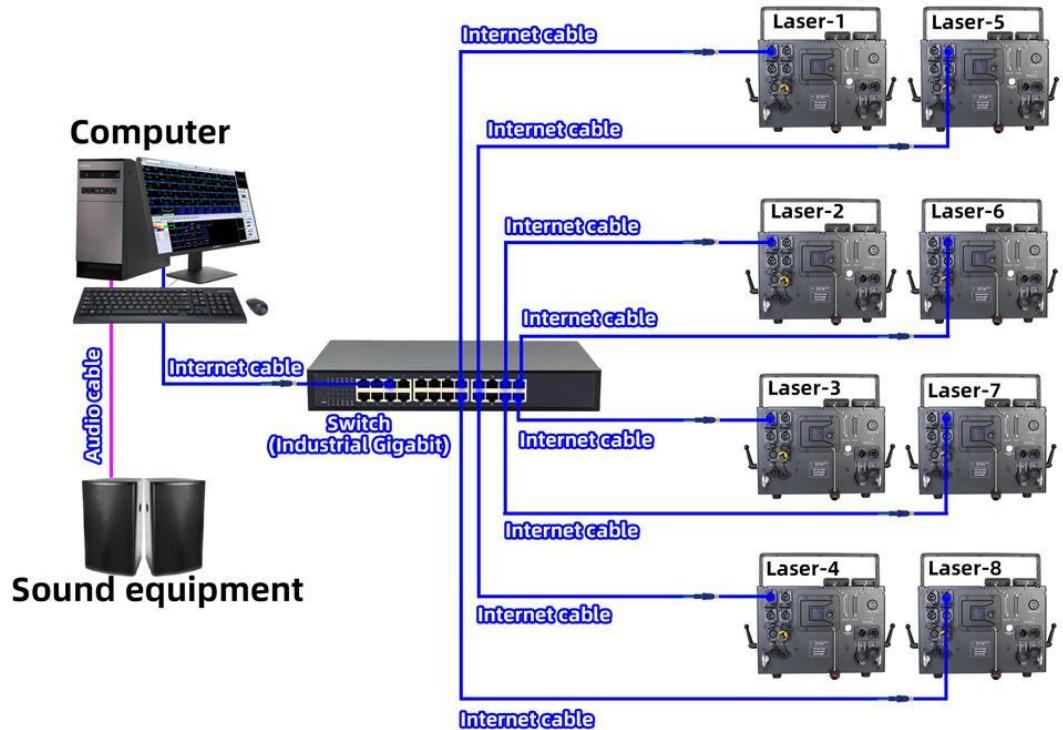

4. Interface main functions

Operation Mode	
Beyond/QS	PC software mode
DMX-512	DMX512 console mode
ArtNet	Network port console mode
sACN	--
Autoplay	Auto play mode
Time code	Time code mode

LCD display:



With touch key knob and LCD menu display, the operation is easy.

Turn the knob to see the function.

Click the knob to select the function, double click the knob to return to the main menu.

LCD menu and function introduction:

初级菜单	
Operation Mode	操作模式
Autoplay Setup	自走设置
Master Settings	激光灯设置
Geo correction	几何矫正
Color Settings	颜色设置
Scan Guard	光闸
FB4 Device Info	FB4版本信息

Operation Mode(操作模式选择)	
Beyond/QS	电脑软件模式
DMX-512	512控台模式
ArtNet	网口控台模式
sACN	没用过
Autoplay	自走模式
Time code	时间码模式

Autoplay Setup	
Playback	播放模式 (cue 单个播放, list 列表播放)
File Index	文件序列
End action	结束动作 (循环 或者停止)

			<table border="1"> <thead> <tr> <th colspan="2">Color Settings</th> </tr> </thead> <tbody> <tr> <td>Color Shift</td> <td>4</td> </tr> <tr> <td>Red</td> <td>100</td> </tr> <tr> <td>Green</td> <td>100</td> </tr> <tr> <td colspan="2">FB4-SE</td> </tr> </tbody> </table>	Color Settings		Color Shift	4	Red	100	Green	100	FB4-SE							
Color Settings																			
Color Shift	4																		
Red	100																		
Green	100																		
FB4-SE																			
			<table border="1"> <thead> <tr> <th colspan="2">Scan Guard</th> </tr> </thead> <tbody> <tr> <td>Enable Guard</td> <td>选X, 没有光闸</td> </tr> <tr> <td>Horizon Level</td> <td>不做设置</td> </tr> <tr> <td>Horizon Angle</td> <td>不做设置</td> </tr> <tr> <td>Min. Velocity</td> <td>不做设置</td> </tr> <tr> <td>Dwell Time</td> <td>不做设置</td> </tr> <tr> <td>Invert Y</td> <td>不做设置</td> </tr> <tr> <td colspan="2">FB4-SE</td> </tr> </tbody> </table>	Scan Guard		Enable Guard	选X, 没有光闸	Horizon Level	不做设置	Horizon Angle	不做设置	Min. Velocity	不做设置	Dwell Time	不做设置	Invert Y	不做设置	FB4-SE	
Scan Guard																			
Enable Guard	选X, 没有光闸																		
Horizon Level	不做设置																		
Horizon Angle	不做设置																		
Min. Velocity	不做设置																		
Dwell Time	不做设置																		
Invert Y	不做设置																		
FB4-SE																			

			<table border="1"> <thead> <tr> <th colspan="2">Master Settings</th> </tr> </thead> <tbody> <tr> <td>Brightness</td> <td>亮度设置</td> </tr> <tr> <td>Master Size</td> <td>大小设置</td> </tr> <tr> <td>X Scale</td> <td>水平大小设置</td> </tr> <tr> <td>Y Scale</td> <td>垂直大小设置</td> </tr> <tr> <td>Invert X</td> <td>水平反向</td> </tr> <tr> <td>Invert Y</td> <td>垂直反向</td> </tr> <tr> <td>Swap XY</td> <td>X、Y互换</td> </tr> <tr> <td>Rescan Time</td> <td>重新扫描时间</td> </tr> </tbody> </table>	Master Settings		Brightness	亮度设置	Master Size	大小设置	X Scale	水平大小设置	Y Scale	垂直大小设置	Invert X	水平反向	Invert Y	垂直反向	Swap XY	X、Y互换	Rescan Time	重新扫描时间
Master Settings																					
Brightness	亮度设置																				
Master Size	大小设置																				
X Scale	水平大小设置																				
Y Scale	垂直大小设置																				
Invert X	水平反向																				
Invert Y	垂直反向																				
Swap XY	X、Y互换																				
Rescan Time	重新扫描时间																				
备注: Master settings是全局设置																					
			<table border="1"> <thead> <tr> <th colspan="2">投影区域设置</th> </tr> </thead> <tbody> <tr> <td>X scale</td> <td>水平大小设置</td> </tr> <tr> <td>Y Scale</td> <td>垂直大小设置</td> </tr> <tr> <td>X Position</td> <td>水平位置设置</td> </tr> <tr> <td>Y Position</td> <td>垂直位置设置</td> </tr> <tr> <td>Z Rotation</td> <td>旋转</td> </tr> <tr> <td>X Shear</td> <td>水平切割</td> </tr> <tr> <td>Y Shear</td> <td>垂直切割</td> </tr> </tbody> </table>	投影区域设置		X scale	水平大小设置	Y Scale	垂直大小设置	X Position	水平位置设置	Y Position	垂直位置设置	Z Rotation	旋转	X Shear	水平切割	Y Shear	垂直切割		
投影区域设置																					
X scale	水平大小设置																				
Y Scale	垂直大小设置																				
X Position	水平位置设置																				
Y Position	垂直位置设置																				
Z Rotation	旋转																				
X Shear	水平切割																				
Y Shear	垂直切割																				

5. DMX512 channels: (for DMX512 console operation)

Channel	Function	Description
1	Function	0..31-Light off 32..96- 4 Channel mode 97..160-8 Channel mode 161..224-12 Channel mode 225..255-16 Channel mode
2	Page selection	0..15-Page 1 16..31- Page 2 32..47- Page 3

		Maximum 9 pages
3	Program selection	0..31-Laser off 32..35- Program 1 36..39- Program 2 40..43 Program 3
		Maximum 48 programs per page
4	Play speed	0..15-100% Speed 17..31-Blank 32..255- 25%-200% Speed
5	Dimmer	0..255-0%-100%
6	Size	0..255-0%-100%
7	X size	0- Original pattern size 1..255-0%-100% Pattern size
8	Y size	0- Original pattern size 1..255-0%-100% Pattern size
9	Rotation	0..255- 0° -360°
10	X position	0-Left 128-Center 255-Right
11	Y position	0-Bottom 128-Center 255-Top
12	Visible point	0-All points invisible 255-All points visible
13	Scanner speed	0..31-Default speed 32..255-25%-200% Speed
14	Blank	Blank
15	Color	0..31 Original color 32..224 Mixing color 225-255-White
16	Blank	Blank

6. Safety Instructions

For safety reasons, please follow the following instructions:

- ◆ Do not disassemble or alter the product.
- ◆ Do not drop flammable liquids, water and metals into the product.

Avoid using the unit in the following situations:

- ◆ The relative humidity is too high.
- ◆ oscillation or collision environment.

Attention:

- ◆ If you encounter serious difficulties in use, please stop immediately, and inquire agents or manufacturers for inspection.
- ◆ Do not disassemble the product, there are no repair parts inside.
- ◆ Please request inspection by qualified personnel.

7. Warranty

We offer 2-year warranty and lifetime maintenance service. Within 2 years, any damage caused by the product's own quality issues can be repaired for free. 2 years later, material cost will be charged for the maintenance or replacement of parts.

The software included in the products can be upgraded and function improved for free in future.

The following product damages or other reasons not caused by our product itself are not covered by our company's free repair service:

1. Wrong installation.
2. Voltage not matched.
3. Not following the user manual and make wrong operation.
4. Any repair or modification not authorized by our company.
5. The product lacks necessary maintenance.
6. The required working environment was not provided.
7. Product damage caused by the user's secondary transportation
8. System failures caused by viruses or other software which is not offered by our company's etc..
9. Force majeure factors such as natural disasters (lightning strikes, earthquakes, tsunamis, floods, etc.) and unexpected situations
10. The power supply for the product must be effectively grounded.